

Gameboy Color

Be sure to turn off the gameboy before removing the camera

The camera.
The "eye" will swivel around 180 degrees.



Volume - on the side of the gameboy

On/off switch, on side of gameboy

The cross shaped button navigates and adjusts brightness or contrast in "shoot" window.

"A" button - yes or go forward - takes the photo.

"B" button - no or go back

Select button

Start button